

# LookOurWay


## NO DANCE - AIR DANCERS® (SEALED AIR)

*Please read each step before you attempt set-up!*

**AIR DANCERS® SET UP:** Before you begin to set up your Air Dancer®, choose a display area that is free of all obstructions (powerlines, sharp projections, etc.). The display area should be twice as large as the largest dimension of the Air Dancer®.



Unpack the Air Dancer® and place in the center of the display area.

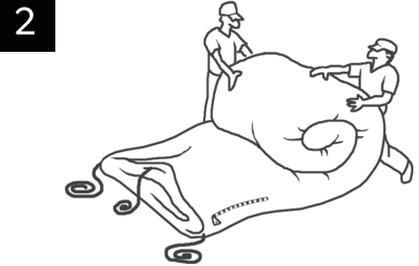

Unroll the Air Dancer®, checking that no folds exist to block the flow of the air during inflation.

Untangle all tethers and extend them from the Air Dancer®.


Check the zippers at the base of the Air Dancer® to be sure they are closed.




Stack the Air Dancer® on top of itself so that during inflation, it will rise vertically.

Connect your Air Blower or Air Pump to the air inlet.

At this point, everything should be ready for smooth and easy inflation.

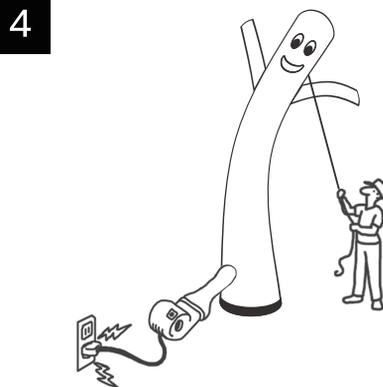

Plug your Air Pump or Air Blower into a 110V outlet. Use caution when making the electrical connection. (DO NOT STAND IN WATER)

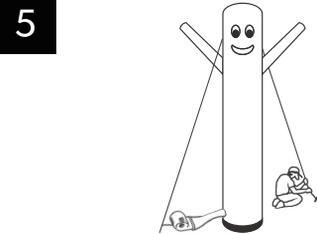

When fully inflated, secure all tethers to tie-down stakes placed around the Air Dancer® so that the tethers project at a 45 degree angle.

Store accessories and bag for future use. IF YOU HAVE A PROBLEM WITH THE AIR DANCER® THAT THE INSTRUCTIONS DON'T COVER, CALL FOR TROUBLESHOOTING ASSISTANCE.

(866) 586-3888

### DEFLATION

- Most Air Dancer® can be deflated and properly stored by two people.
- To deflate, unplug the fan unit.
- Open zipper(s) and gently guide the Air Dancer® down on top of itself, taking care not to snag it on the stakes.
- Untie tethers from tie down stakes.
- Carefully, fold the Air Dancer® into thirds and place in the bag.

### WARNING

**WARNING: NEVER STORE YOUR AIR DANCER® WET FOR OVER 48 HOURS BECAUSE MOLD AND MILDEW WILL FORM CAUSING STAINS AND DISCOLORATION. IF PACKED WET, UNPACK AND LAY OUT FLAT TO DRY FULLY IN THE SUN TO PREVENT DAMAGE. SEE WARRANTY FOR FURTHER INFORMATION.**

Remember to gather up all ground stakes and other Air Dancer® accessories to be stored with the Air Dancer® for the next use.